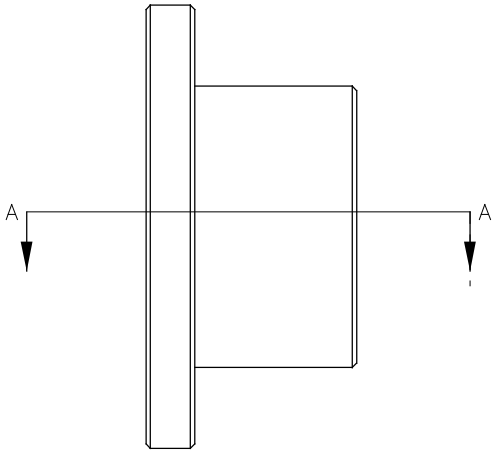

PLAN

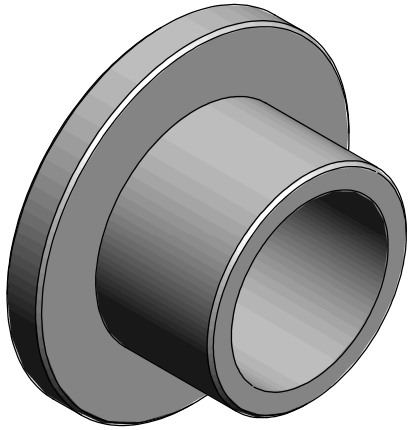

TRIMETRIC

Dad,
These are made from mild steel.
I will need 16 of them.
Each rose joints takes 2 and need to fit inside the RHS.

It needs to be a very tight fit when the buttons are pushed in and a bolt it fitted and tightened. The buttons need to be a light press into the rose joints or a locktite. Then the assembly a tight fit inside the RHS. When the bolt is fitted and tightened, the rose joint needs to move and not the bolt inside the buttons.

Cheers.

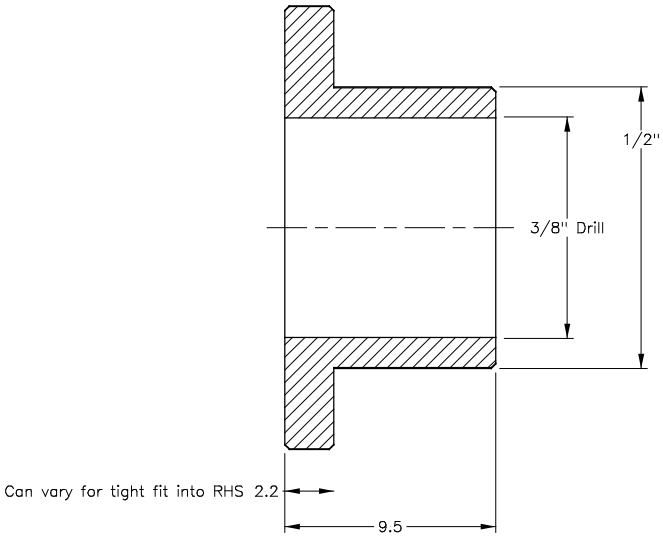

A – A

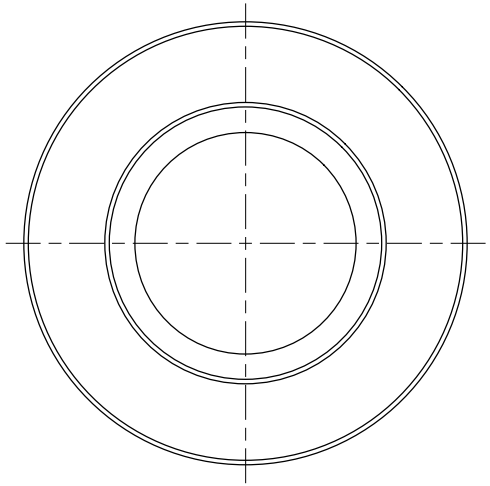

RIGHT

REV	DESCRIPTION	BY	DATE

TITLE

	SCALE	DATE
	DRAWN BY	
	CHECKED BY	
	APPROVED BY	
PROJECT NUMBER	DRAWING NUMBER	